



	Bell Helicopter										Eurocopter					Sikorsky			
	204	205	212	212S	412	214	206	206L	429	407	407HP	AS350	AS255	EC120	EC130	EC135	EC145	S76a**	S76C*
Honeywell T53-11, 13B, 17A, 17B, 17BCV	●	●		●															
Honeywell HTS900											●								
Rolls Royce C20 Series							●	●		●									

	204	205	212	212S	412	214	206	206L	429	407	407HP	AS350	AS255	EC120	EC130	EC135	EC145	S76a**	S76C*
<b>Fuel Shop</b>																			
Fuel Manifold / Nozzle Inspection	●	●	●	●	●														
Exchange	●	●	●	●	●														
Rental	●	●	●	●	●														

	204	205	212	212S	412	214	206	206L	429	407	407HP	AS350	AS255	EC120	EC130	EC135	EC145	S76a**	S76C*
<b>Component Shop</b>																			
Overhaul / Inspection	●	●	●	●	●	●	●	●		●	●								

	204	205	212	212S	412	214	206	206L	429	407	407HP	AS350	AS255	EC120	EC130	EC135	EC145	S76a**	S76C*
<b>Structure Shop</b>																			
Certified Tailboom Jig Repairs		●	●	●	●														

	204	205	212	212S	412	214	206	206L	429	407	407HP	AS350	AS255	EC120	EC130	EC135	EC145	S76a**	S76C*
<b>Maintenance Shop</b>																			
CASA Approved	●	●	●	●	●		●	●		●	●	●		●	●				
Indonesia DGCA Approved	●	●	●	●	●		●	●		●	●	●							

	204	205	212	212S	412	214	206	206L	429	407	407HP	AS350	AS255	EC120	EC130	EC135	EC145	S76a**	S76C*
<b>Avionics Shop</b>																			
Install / Upgrade	●	●	●	●	●		●	●		●	●	●		●	●				
Aircraft Completions	●	●	●	●	●		●	●		●	●	●		●	●				



## Component Shop

<b>Bell 204/205/Bell 212</b>	Description	Part #	Overhaul <sup>1</sup>	Repair <sup>2</sup>	Refurb <sup>3</sup>	Inspect <sup>4</sup>
Main rotor hub	Hub assy	204-012-101-XXX	✓	✓	✓	✓
Main transmission	Transmission	212-040-001-XXX	✓	✓	✓	✓
Main rotor mast	Mast assy	204-040-366-XXX	✓	✓	✓	✓
		212-540-002-XXX	✓	✓	✓	✓
Main rotor blades	Main rotor blade	204-012-001-XXX		✓	✓	✓
		212-015-501-XXX		✓	✓	✓
Flight controls	Swashplate support assy	204-011-400-XXX	✓	✓	✓	✓
	Scissor & sleeve assy	204-011-401-XXX	✓	✓	✓	✓
	Stabiliser bar	204-011-326-XXX	✓	✓	✓	✓
	Horizontal stabilizer	205-030-890-XXX	✓	✓	✓	✓
	Various bellcranks and links	Various	✓	✓	✓	✓
90° gearbox	Gearbox	212-040-004-XXX	✓	✓	✓	✓
42° gearbox	Gearbox	212-040-003-XXX	✓	✓	✓	✓
Tail rotor driveshaft assy	Tail rotor driveshaft coupling	212-040-601-XXX	✓	✓	✓	✓
	Tail rotor driveshaft hangers	212-040-600-XXX	✓	✓	✓	✓
Tail rotor hub and blades	Tail rotor hub	212-010-701-XXX	✓	✓	✓	✓
	Tail rotor blades & pitch change components	Various	✓	✓	✓	✓
Driveshafts engine XMSN	Engine XMSN driveshaft	212-040-005-XXX	✓	✓	✓	✓
Rotor brake quill	Transmission	412-040-123-XXX	✓	✓	✓	✓
Suspension system	Cargo hook & suspension system	528-020-XXX & 200-088-XXX	✓	✓	✓	✓
Oil cooler blowers	Oil cooler blower assy	209-062-502-XXX	✓	✓	✓	✓
Landing gear	Skid gear assy	205-050-400-XXX	✓	✓	✓	✓
Engine	Pratt & Whitney	PT6-3X / T53-XX		✓		✓

<b>Bell 206A/B/L</b>	Description	Part #	Overhaul <sup>1</sup>	Repair <sup>2</sup>	Refurb <sup>3</sup>	Inspect <sup>4</sup>
Main rotor hub	Hub assy	206-011-100-XXX	✓	✓	✓	✓
Main transmission	Transmission	206-040-002-XXX & 206-040-004-XXX	✓	✓	✓	✓
Main rotor mast	Mast assy	206-040-002-XXX & 206-040-014-XXX	✓	✓	✓	✓
Flight controls	Swashplate & drive assy	206-010-450-XXX	✓	✓	✓	✓
	Various bellcranks and links	Various	✓	✓	✓	✓
Freewheel unit assy	Freewheel	206-040-270-XXX & 406-040-500-XXX	✓	✓	✓	✓
Tail rotor gearbox assy	Tail gearbox	206-040-400-XXX & 206-040-402-XXX	✓	✓	✓	✓
Tail rotor hub assy	Tail rotor hub & blades	206-011-810-XXX	✓	✓	✓	✓
Tail rotor blade	Bearing replacement	206-016-201-XXX & 2062200-301 (Van Horn)		✓	✓	✓
Cargo hook	Hook assy	528-023-XX & 528-029-XX	✓	✓	✓	✓
Oil cooler blower	Blower assy	206-061-432-XXX	✓	✓	✓	✓
Landing gear	Skid gear assy	206-706-031-XXX	✓	✓	✓	✓
Engine	Rolls Royce	250-C20B		✓		✓

<b>Bell 407</b>	Description	Part #	Overhaul <sup>1</sup>	Repair <sup>2</sup>	Refurb <sup>3</sup>	Inspect <sup>4</sup>
Main rotor hub	Hub assy	407-010-100-XXX	✓	✓	✓	✓
Main transmission	Transmission	407-040-006-XXX	✓	✓	✓	✓
Main rotor mast	Mast assy	407-040-011-XXX	✓	✓	✓	✓
Flight controls	Swashplate support assy	406-010-401-XXX	✓	✓	✓	✓
	Main rotor pitch links	406-010-413-XXX	✓	✓	✓	✓
	Various bellcranks and links	Various	✓	✓	✓	✓
Tail rotor gearbox	Gearbox	406-040-400-XXX	✓	✓	✓	✓
Freewheel unit assy	Freewheel	406-040-500-XXX	✓	✓	✓	✓
Oil cooler blower assy	Blower assy	407-040-303-XXX	✓	✓	✓	✓
Tail rotor hub	Tail rotor hub assy	407-012-101-XXX	✓	✓	✓	✓
Cargo hook	Cargo hook & suspension system	528-023-XX, 528-029-XX, 200-259-XX	✓	✓	✓	✓
Landing gear	Skid gear assy	407-706-007-XXX	✓	✓	✓	✓
Engine	Rolls Royce	250-C47		✓		✓

<b>Bell 412</b>	Description	Part #	Overhaul <sup>1</sup>	Repair <sup>2</sup>	Refurb <sup>3</sup>	Inspect <sup>4</sup>
Main rotor hub	Hub assy	412-010-100-XXX	✓	✓	✓	✓
Main transmission	Transmission	412-040-004-XXX	✓	✓	✓	✓
Main rotor mast	Mast assy	412-040-366-XXX	✓	✓	✓	✓
Main rotor blades	Main rotor blade	412-015-300-XXX		✓	✓	✓
Flight controls	Swashplate support assy	412-010-402-XXX	✓	✓	✓	✓
	Hub & sleeve assy	412-010-401-XXX	✓	✓	✓	✓
	Main rotor PCL	412-010-425-XXX	✓	✓	✓	✓
	Various bellcranks and links	Various	✓	✓	✓	✓
90° gearbox	Gearbox	212-040-004-XXX	✓	✓	✓	✓
42° gearbox	Gearbox	412-040-006-XXX	✓	✓	✓	✓
Main driveshaft	Driveshaft assy	412-040-005-XXX	✓	✓	✓	✓
Rotor brake quill	Main rotor transmission	412-040-123-XXX	✓	✓	✓	✓
Tail rotor driveshaft assy	Tail rotor driveshaft hangers	412-040-600-XXX	✓	✓	✓	✓
	Tail rotor driveshaft couplings	412-040-601-XXX	✓	✓	✓	✓
Tail rotor hub & blades	Tail rotor hub	212-011-701-XXX	✓	✓	✓	✓
	Tail rotor blades & pitch change components	Various	✓	✓	✓	✓
Oil cooler blower	Oil cooler blower assy	209-062-502-XXX	✓	✓	✓	✓
Suspension system	Cargo hook & suspension system	528-020-XXX & 200-088-XX	✓	✓	✓	✓
Landing gear	Ski gear assy	412-706-003-XXX	✓	✓	✓	✓
Engine	Pratt & Whitney	PT6-3XX		✓		✓

Special Maintenance	Description	Part #	Overhaul <sup>1</sup>	Repair <sup>2</sup>	Refurb <sup>3</sup>	Inspect <sup>4</sup>
NDT	Magnetic particle	Various				✓
	Fluorescent penetrant					✓
Composite	Hot bonding	Various		✓		
	Cold bonding			✓		
Refurbish	Aircraft preparation & painting	Various		✓	✓	
Structural	Sheet metal repairs	Various		✓		
Plating	Brush cadmium coating	Various		✓		

<sup>1</sup> TSO is reset to zero

<sup>2</sup> TSO is not reset to zero

<sup>3</sup> Includes paint

<sup>4</sup> To manufacturer requirements